
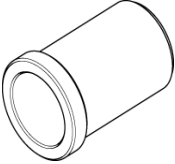 

 
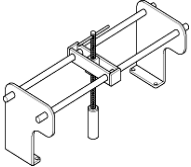 
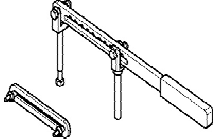 
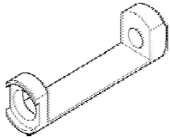 
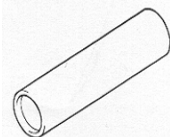 

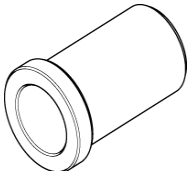 


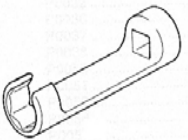 
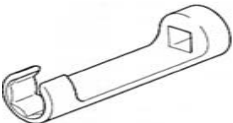 
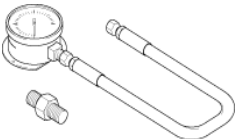 
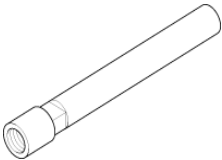 
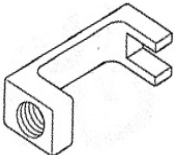 
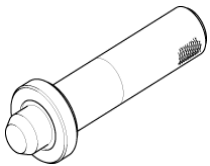 
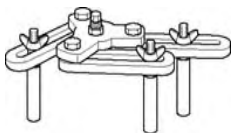 

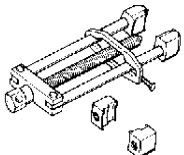 
 
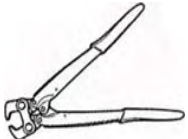 
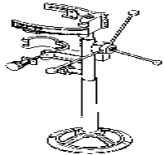 
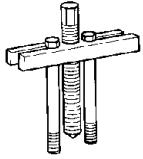 
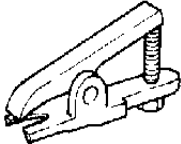 
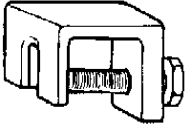 
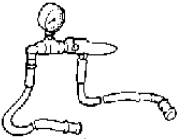 
 
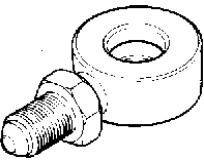 



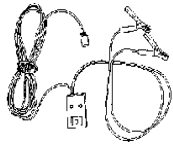 
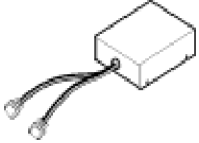 
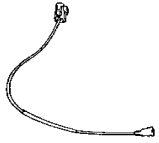 
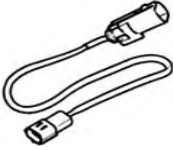 
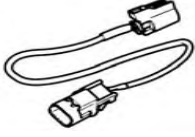 
06' NEW CARENS					EM	FL	AT	ST	DS	BR	SS	HA	RT	USE
No	Tool No.	Tool Name	Illustration	GRADE										
1	09200-38001	ENGINE SUPPORT FIXTURE		D			O							Removal and installation of transaxle
2	09212-27100	CAMSHAFT OIL SEAL I.& BALANCE..		A			O							Installation of the camshaft oil seal
3	09215-3C000	OIL PAN REMOVER		A			O							Removal of oil pan
4	09222-27200	VALVE STEM OIL SEAL INS.		A			O							Installation of valve stem oil seals
5	09222-27300	VALVE SPRING COMPRESSOR		A			O							Removal and installation of intake and exhaust valves
6	09222-3K000	VALVE SPRING COMPRESSOR		A			O							Removal and installation of the intake or exhaust valve

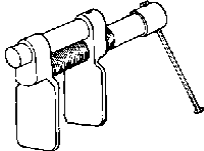 
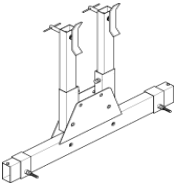 

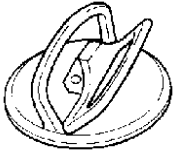 


06' NEW CARENS				EM	FL	AT	ST	DS	BR	SS	HA	RT	USE
7	09222-3K100	VALVE SPRING COMPRESSOR ADAPTER (G-ENG)		A	O								Removal and installation of the intake or exhaust valve
8	09222-4A000	VALVE STEM SEAL INSTALLER		A	O								Installation of the valve stem oil seal
9	09231-27000	CRANK SHAFT REAR OIL SEAL INS.		B	O								Installation of the crankshaft rear oil seal
10	09231-27100	CRANK SHAFT FRONT OIL SEAL INS.		A	O								Installation of the front case oil seal
11	09263-27000	OIL FILTER WRENCH (CRDI-D:EXCEPT EUROPE LHD)		A	O								Removal and installation of oil filter for Europe LHD
12	09263-2E000	OIL FILTER WRENCH		A	O								Removal and installation of oil filter for rest area except Europe LHD


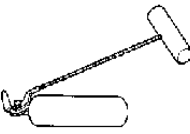 

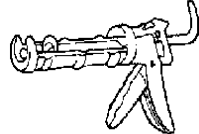 
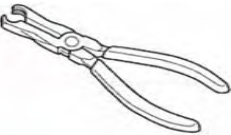 
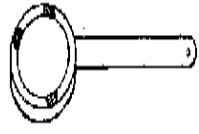 
06' NEW CARENS				EM	FL	AT	ST	DS	BR	SS	HA	RT	USE
13	09314-27110	CRDI HIGH PIPE RE/IN ADPATER		C	O								Installing the high pressure pipe
14	09314-27120	CRDI HIGH PIPE RE/IN ADPATER		C	O								Installing the high pressure pipe
15	09351-27000	COMPRESSION GAUGE		A	O								Checking engine compressgon pressure
16	09351-27100	COMPRESSION GAUGE ADAPTER		A	O								Checking engine compressgon pressure
17	09351-27210	INJECTOR REMOVER ADAPTER		B	O								Removing the injector
18	09351-27401	INJECTOR OIL SEAL INSTALLER		A	O								Installation of the injector oil seal

06' NEW CARENS				EM	FL	AT	ST	DS	BR	SS	HA	RT	USE
19	09351-4A200	INJECTOR REMOVER		B	O								Removing the injector
20	09351-4A300	INJECTOR REMOVER											Removal of Injector
21	09432-11000	MAINSHAFT BEARING PULLER		B				O					Removal of the tone wheel
22	09495-39100	BAND INSTALLER TOOL		B				O					Installation of hook type boot band
23	09495-3K000	BAND INSTALLER		B	O			O					Installation of bank clamps/Installation of ear type boot band
24	09546-26000	COIL COMPRESSOR		D						O			Compression of coil spring

06' NEW CARENS				EM	FL	AT	ST	DS	BR	SS	HA	RT	USE
25	09561-11001	STEERING WHEEL PULLER		D			O						Removal of steering wheel
26	09568-34000	BALL JOINT PULLER		A			O			O			Seperation of tie-rod end ball joint
27	09568-4A000	BALL JOINT PULLER		A				O					Removal of the front lower arm and tie rod end ball joint
28	09572-21000	P/S OIL PRESSURE GAUGE		A			O						Measurement of oil pressure(Use with 09572-22100,09572-21200)
29	09572-21200	P/S OIL PRESSURE GAUGE ADAPTER		A			O						Measurement of oil pressure(Use with 09572-22100,09572-22100)
30	09572-22100	OIL PRESSURE GAUGE ADAPTER		A			O						Measurement of oil pressure(Use with 09572-21000,09572-21200)

06' NEW CARENS				EM	FL	AT	ST	DS	BR	SS	HA	RT	USE	
31	0957A-2G000	DEPLOYMENT ADAPTER		D									O	Use with dummy(DAB,CAB,BPT)
32	0957A-34100A	AIR BAG DEPLOYMENT TOOL		C									O	Airbag deployment tool
33	0957A-38200	DUMMY		C									O	Simulator to check the resistance of each wiring harness
34	0957A-38500	USED WITH DEPLOYMENT TOOL(DAB,CAB,BPT)		D									O	Use with deployment tool (DAB,CAB,BPT)
35	0957A-3F000	DUMMY ADAPTER(SAB)		D									O	Use with dummy(PAB,SAB)
36	0957A-3F100	DEPLOYMENT ADAPTER(SAB)		D									O	Use with deployment tool(PAB,SAB)

06' NEW CARENS				EM	FL	AT	ST	DS	BR	SS	HA	RT	USE
37	09581-11000	PISTON EXPENDER		D					O				Pushing back of the front disc and rear disc brake piston
38	09624-38000	CROSSMEMBER SUPPORT		C					O				Supporting of the cressmember
39	09861-31000	WINDSHILD GLASS HOLDING REMOVER		D					O				Removal of the windshield molding
40	09861-31400	GLASS HOLDER		D					O				Removal and installation of the windshield
41	09793-21000	DOOR HINGE ADJUSTING WRENCH		D					O				Adjustment, removal and installation of the door hinge
42	09800-21000	ORNAMENT REMOVER		D					O				Trim removal

06' NEW CARENS				EM	FL	AT	ST	DS	BR	SS	HA	RT	USE
43	09853-31000	HEAD LINING CLIP REMOVER		D		O							Removal of the headliner clops
44	09861-31100	SEALANT CUT-OUT TOOL		D		O							Cutting the selalant of the windshield(Use with 09861-31200)
45	09861-31200	SEALANT CUTTING BLADE		D		O							Cutting the selalant of the windshield(Use with 09861-31100)
46	09861-31300	SEALANT GUN		D		O							Application of the sealant to the windshield
47	09880-4F000A	HOG RING PLIER		B		O							Installation of the hog ring clip
48	09977-29000	DISC & HUB BOLT REMOVER		C							O		Removal and installation of disc&hub assembly