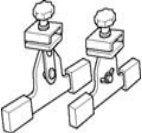 
 


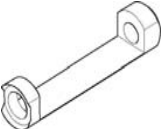 
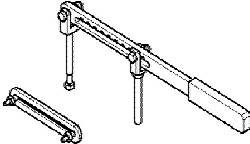 

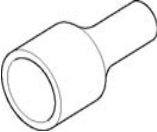 
 
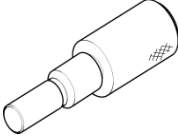 
 
 

 



06' PICANTO DSL 1.1L					EM	EE	FL	CH	MT	USE
No.	Tool No.	Tool name	Illustration	GRADE	D3FA-DSL1.1	D3FA-DSL1.1				
1	09200-1C000	SUPPORT FOR ENGINE SUPPORT FIXTURE		D	O					Support of engine for Picanto (USE with 09200-38001)
2	09200-38001	ENGINE SUPPORT FIXTURE		D	O				O	Support of engine
3	09215-3C000	OIL PAN REMOVER		A	O					Removal of oil pan
4	09222-2A000	VALVE STEM SEAL INSTALLER		A	O					Installation of valve stem oil seals
5	09222-2A100	VALVE SPRING COMPRESSOR		A	O					Removal and installation of intake and exhaust valves
6	09222-3K000	VALVE SPRING COMPRESSOR		A	O					Removal and installation of intake and exhaust valves
7	09231-2A000	FRONT COVER OIL SEAL INSTALLER		A	O					Installation of crankshaft rear oil seal
8	09231-33000	CRANK SHAFT REAR OIL SEAL INS.		A	O					Installation of crankshaft rear oil seal

06' PICANTO DSL 1.1L					EM	EE	FL	CH	MT	USE
9	09231-H1100	HANDLE		A	O					Installation of front cover oil seal
10	09314-27110	CRDI HIGH PIPE RE/IN ADPATER		C			O			Installing the high pressure pipe
11	09314-27120	CRDI HIGH PIPE RE/IN ADPATER		C			O			Installing the high pressure pipe
12	09331-2A000	HIGH PRESSURE PUMP SPROCKET REMOVER		A	O		O			Removal of high pressure pump sprocket
13	09351-27000	COMPRESSION GAUGE		A	O					Checking engine compression pressure
14	09351-2A000	COMPRESSURE GAUGE ADAPTER		A	O					Checking engine compression pressure
15	09351-2A100	INJECTOR REMOVER ADAPTER		B	O		O			Removal of injectors
16	09351-4A200	INJECTOR REMOVER		B	O		O			Removal of injectors
17	09351-4A300	INJECTOR REMOVER								Removal of Injector

06' PICANTO DSL 1.1L					EM	EE	FL	CH	MT	USE
18	09373-27000	ALTERNATOR PULLEY R&I		B		O				Removal and installation of alternator pulley
19	09411-25000	CLUTCH ALIGNMENT ARBOR		A				O		Installation of the clutch disc
20	09452-21200	OIL PUMP OIL SEAL INS.		A					O	Installation of differential oil seal
21	09231-2A110	FLYWHEEL STOPPER		A	O					Removal and installation of crankshaft pulley bolt
22	09310-2B100	FUEL PUMP PLATE COVER WRENCH		A			O			Removing and installing the fuel sender plate cover
23	09840-1E100	CENTER FASCIA REMOVER								Removal of Center Fascia
24	OK000 005 AA0	WIRE HARNESS REPAIR KIT II UPGRADE(STANDARD)								Repair Wire Harness