 
 

 

 
 
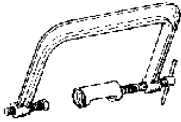 
 

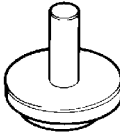 
 
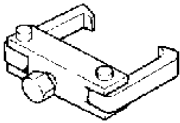 
 



 
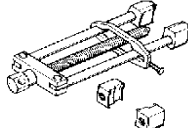 
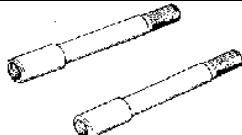 
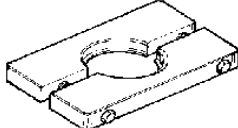 
 
 
 

 
 



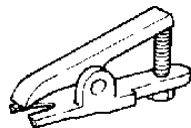 

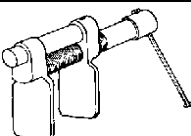 


 


 



K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
1	09212-43100	SILENT SHAFT BEARING PULLER		o													
2	09212-43200	SILENT SHAFT BEARING INSTALLER		o													
3	09212-43300	BEARING INSTALLER STOPPER		o													
4	09214-32000	CRANKSHAFT FRONT OIL SEAL INS.		o													
5	09214-43000	CONNECTING ROD BUSHING REPLACEMENT		o													
6	09221-21000	CAM SHAFT OIL SEAL INS.		o													
7	09221-32001	CYLINDER HEAD BOLT WRENCH		o													

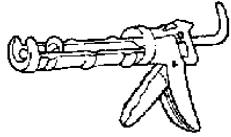 
 
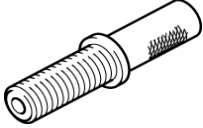 
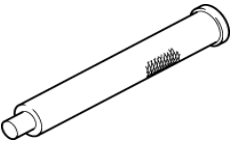 
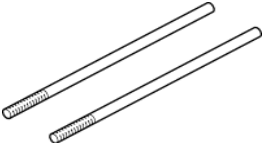 

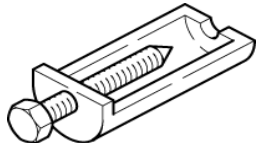 
K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
8	09222-21000	VALVE SPRING COMPRESSOR		o													
9	09222-32100	VALVE STEM SEAL INSTALLER		o													
10	09222-43200	SILENT SHAFT DRIVE GEAR...		o													
11	09231-32000	CRANKSHAFT REAR OIL SEAL INSTALLER		o													
12	09310-43000	PRESTROKE MEASURING ADAPTER				o											
13	09314-43000	INJECTION PUMP SPROCKET PULLER		o		o											
14	09314-43100	NOZZLE HOLDER SOCKET WRENCH(22mm)				o											

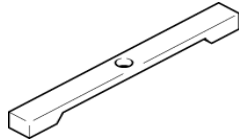 
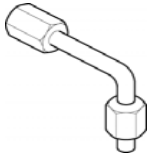 
 
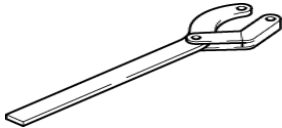 
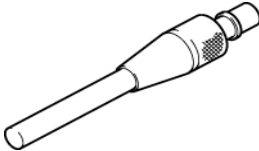 
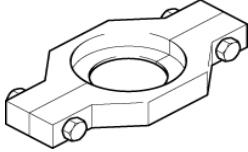 
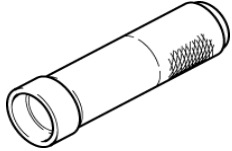 
K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
15	09411-43000	CLUTCH ALIGNMENT ARBOR							o								
16	09414-11000	LOCK PIN EXTRACTOR								o							
17	09414-11100	LOCK PIN INSTALLER								o							
18	09431-32000	FRONT OIL SEAL INSTALLER								o							
19	09432-11000	MAINSHAFT BEARING PULLER								o							
20	09432-11100	MAINSHAFT BEARING PULLER, ADAPTER								o							
21	09432-24000	SECOND GEAR PULLEY PLATE								o							

K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
22	09432-33300	BEARING INSTALLER								○							
23	09455-33200	BEARING INSTALLER								○							
24	09457-22100	TRANSFER BEARING OUTER RACE INS.								○							
25	09517-43401	WORKING BASE											○				
26	09527-4F000	LOWER ARM BUSHING REMOVER												○			
27	09532-11600	PRELOAD SOCKET												○			
28	09533-45000	SIDE BEARING INSTALLER(RA)												○			

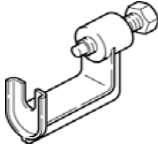 
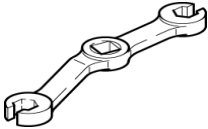 
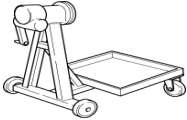 

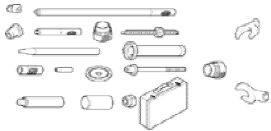 
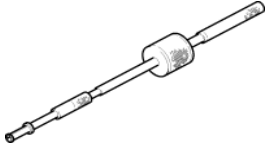 

K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
29	09541-43001	LOWER ARM BUSHING REMOVER												o			
30	09545-11000	BALL JOINT REMOVER & INSTALLER												o			
31	09545-3A000	LOWER ARM BUSHING REMOVER												o			
32	09551-4F000	BUSHING REMOVER AND INSTALLER												o			
33	09568-34000	BALL JOINT PULLER											o				
34	09568-4A000	BALL JOINT PULLER												o			
35	09581-11000	PISTON EXPENDER														o	

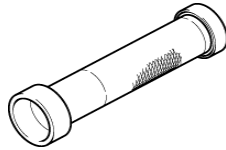 
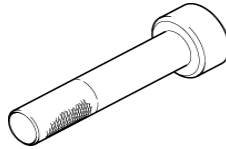 
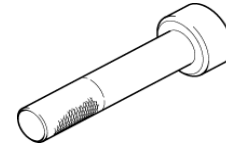 
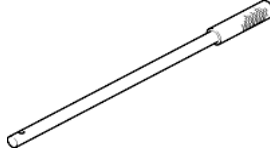 
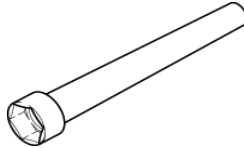 
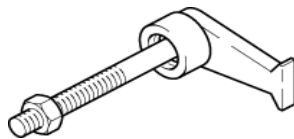 
 
K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD	
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7											
36	09793-21000	DOOR HINGE ADJUSTING WRENCH																o
37	09800-21000	ORNAMENT REMOVER																o
38	09853-31000	HEAD LINING CLIP REMOVER																o
39	09861-22000	TORSION BAR WRENCH																o
40	09861-31000	WINDSHILD GLASS HOLDING REMOVER																o
41	09861-31100	SEALANT CUT-OUT TOOL																o
42	09861-31200	SEALANT CUTTING BLADE																o

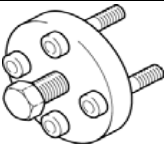 
 
 
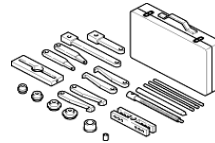 
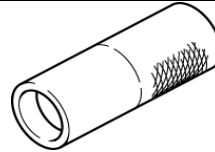 
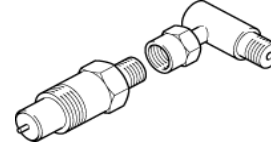 
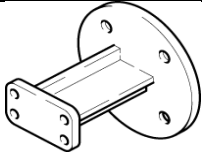 
K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD	
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7											
43	09861-31300	SEALANT GUN																o
44	09861-31400	GLASS HOLDER																o
45	OK011 190 001	OIL SEAL STOPPER										o						
46	OK011 190 002	OIL SEAL INSTALLER										o						
47	OK011 190 003	O/D CASE INSTALLER										o						
48	OK011 190 004	MAIN SHAFT PIN REMOVER										o						
49	OK011 190 006S	OIL PUMP REMOVER										o						


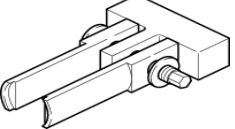 
 
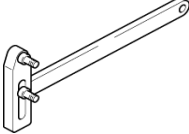 



K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
50	OK011 190 007	GAUGE BLOCK										o					
51	OK011 190 009	ADAPTER										o					
52	OK011 190 AA0	REMOVER & INSTALLER SNAP RING SET										o					
53	OK130 111 004	COUPLING FLANGE HOLDER			o								o				
54	OK130 160 010	CLUTCH DISC CENTERING TOOL			o												
55	OK130 175 008	FAN PULLEY BOSS PULLER											o				
56	OK130 175 A13	BODY											o				

 
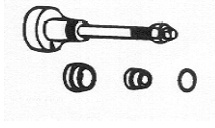 
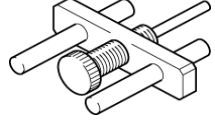 


K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
57	OK130 283 021	BALL JOINT PULLER											o		o		
58	OK130 430 019	FLARE NUT WRENCH							o							o	
59	OK130 990 007	ENGINE STAND ASS'Y										o					
60	OK201 190 AA0	OIL PRESSURE GAUGE SET										o					
61	OK201 323 AA0	POWER STEERING REPAIR SET													o		
62	OK410 111 012	BEARING PULLER							o								
63	OK590 111 001	RING GEAR BRAKE			o												

K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
64	OK590 170 004	MAIN DRIVE GEAR INSTALLER									o						
65	OK590 170 007	BEARING INSTALLER									o						
66	OK590 170 008	BEARING INSTALLER									o						
67	OK590 171 009	SHAFT FORK ASS'Y GUIDE									o						
68	OK590 171 010	MAIN SHAFT LOCK NUT WRENCH									o						
69	OK670 111 004	RING GEAR BRAKE							o								
70	OK670 130 010	CAMLIFT MEASURING DEVICE			o												

K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
71	OK670 131 005	EXTRACTOR			o		o	o									
72	OK670 131 010	CAM LIFT MEASURING DEVICE					o	o									
73	OK670 140 015	OIL PRESSURE GAUGE			o												
74	OK670 990 AA0	BEARING PULLER SET									o		o				
75	OK710 120 004	VALVE SEAL PUSHER			o												
76	OK71E 131 001	COMPRESSOR GAUGE ADAPTER SET			o												
77	OK72A 101 001	ENGINE HANGER			o												

K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
78	OK993 120 001	VALVE SPRING LIFTER ARM			o												
79	OK993 120 004	VALVE SPRING LIFTER PIVOT			o												
80	OK993 120 006	VALVE SEAL REMOVER			o												
81	OK993 270 014	ADJUST NUT WRENCH											o				
82	OK993 270 A03	ATTACHMENT											o				
83	OK993 270 A04	ATTACHMENT											o				
84	OK993 270 A08	GAUGE BLOCK											o				

K2700 (PREGIO BESTA)			ILLUSTRATION	EM	EMA	FL	FLA	FLB	CH	MT	MTA	AT	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name		GLS2.0/2.4	GLS2.7	GSL2.0/2.4	GSL2.7										
85	0K993 270 A09	DRIVE PINION GAUGE SET											o				
86	0K993 270 A10	DRIVE PINION MODEL											o				
87	0K993 430 032	ADJUST GAUGE															o