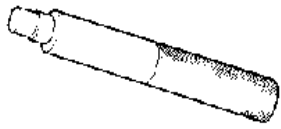 

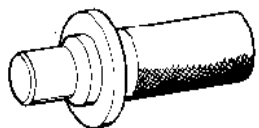 
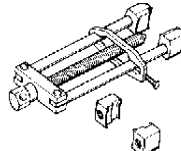 
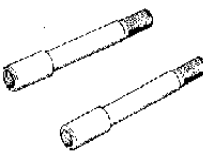 
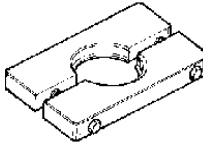 
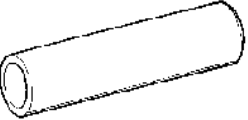 


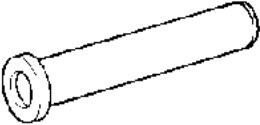 
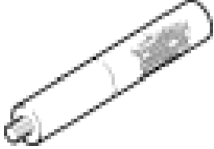 


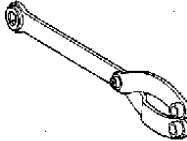 
 

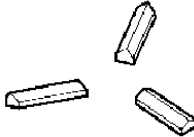 
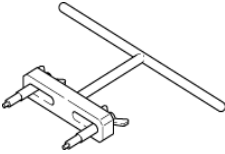 
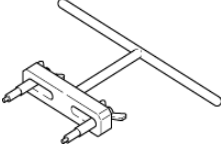 
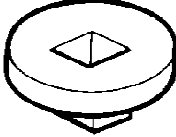 

 
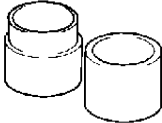 

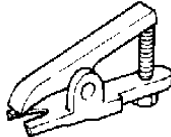 
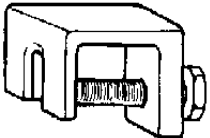 
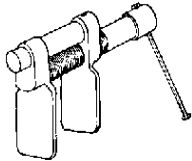 

 
 

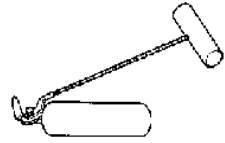 



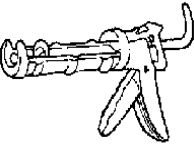 
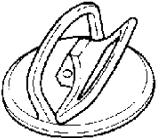 
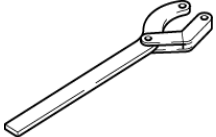 
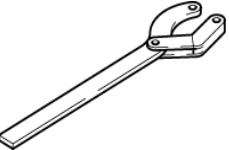 
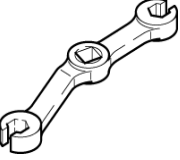 
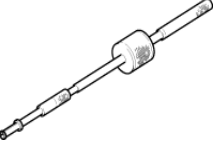 
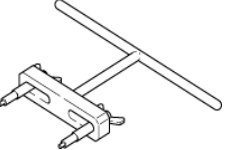 
K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
1	09411-43000	CLUTCH ALIGNMENT ARBOR				o							
2	09414-11000	LOCK PIN EXTRACTOR					o						
3	09431-32000	FRONT OIL SEAL INSTALLER					o						
4	09432-11000	MAINSHAFT BEARING PULLER					o						
5	09432-11100	MAINSHAFT BEARING PULLER, ADAPTER					o						
6	09432-24000	SECOND GEAR PULLEY PLATE					o						
7	09432-33300	BEARING INSTALLER					o						

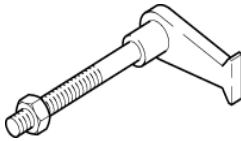 
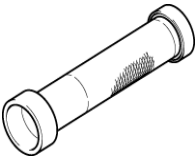 
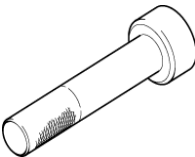 
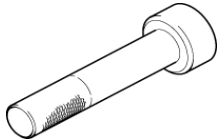 
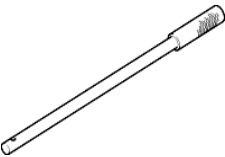 
 
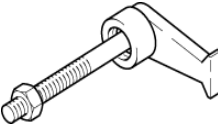 
K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
8	09432-33700	BEARING OUTER RACE INS.							o				
9	09455-33200	BEARING INSTALLER					o						
10	09457-22100	TRANSFER BEARING OUTER RACE INS.					o						
11	09500-11000	BAR							o				
12	09500-21000	HANDLE							o				
13	09517-21400	DRIFT							o				
14	09517-21700	END YOKE HOLDER							o				

 
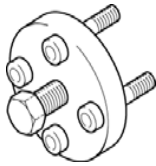 


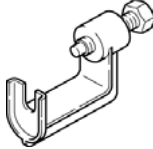 
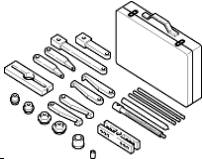 
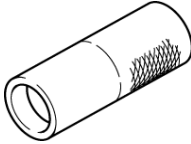 
K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
15	09517-43001	BEARING PULLER							o		o		
16	09517-43401	WORKING BASE							o				
17	09517-43500	WORKING BASE ADAPTER							o				
18	09527-47000	REAR AXLE HUB WHEEL NUT REMOVER & INSTALLER											
19	09527-4F000	LOWER ARM BUSHING REMOVER								o			
20	09532-11600	PRELOAD SOCKET							o	o			
21	09532-32000	BEARING INSTALLER											

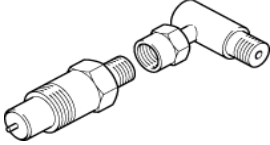 
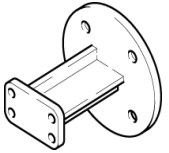 
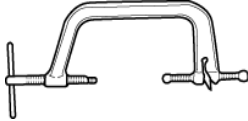 
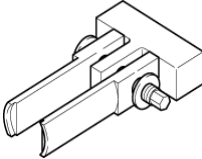 
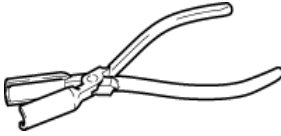 
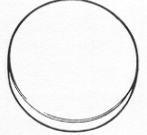 
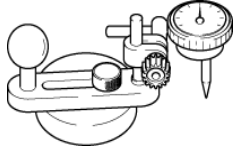 
K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
22	09533-45000	SIDE BEARING INSTALLER(RA)								o			
23	09541-43001	LOWER ARM BUSHING REMOVER								o			
24	09545-11000	BALL JOINT REMOVER & INSTALLER								o			
25	09545-3A000	LOWER ARM BUSHING REMOVER								o			
26	09551-4F000	BUSHING REMOVER AND INSTALLER								o			
27	09568-34000	BALL JOINT PULLER								o			
28	09568-4A000	BALL JOINT PULLER								o	o		

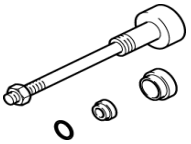 
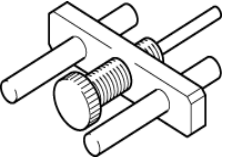 
K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
29	09581-11000	PISTON EXPENDER										o	
30	09793-21000	DOOR HINGE ADJUSTING WRENCH											o
31	09800-21000	ORNAMENT REMOVER											o
32	09861-22000	TORSION BAR WRENCH											o
33	09861-31000	WINDSHILD GLASS HOLDING REMOVER											o
34	09861-31100	SEALANT CUT-OUT TOOL											o
35	09861-31200	SEALANT CUTTING BLADE											o

K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
36	09861-31300	SEALANT GUN											o
37	09861-31400	GLASS HOLDER											o
38	0K130 111 004	COUPLING FLANGE HOLDER		o		o							
39	0K130 160 010	CLUTCH DISC CENTERING TOOL		o									
40	0K130 430 019	FLARE NUT WRENCH				o						o	
41	0K410 111 012	BEARING PULLER				o							
42	0K410 262 025A	REAR BEARING NUT WRENCH										o	

K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
43	OK590 111 001	RING GEAR BRAKE		o									
44	OK590 170 004	MAIN DRIVE GEAR INSTALLER						o					
45	OK590 170 007	BEARING INSTALLER						o					
46	OK590 170 008	BEARING INSTALLER						o					
47	OK590 171 009	SHAFT FORK ASS'Y GUIDE						o					
48	OK590 171 010	MAIN SHAFT LOCK NUT WRENCH						o					
49	OK670 111 004	RING GEAR BRAKE											

K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
50	0K670 130 010	CAMLIFT MEASURING DEVICE		o	o								
51	0K670 131 005	EXTRACTOR		o	o								
52	0K670 131 010	CAM LIFT MEASURING DEVICE											
53	0K670 140 015	OIL PRESSURE GAUGE		o									
54	0K670 321 019	SOCKET JOINT PULLER									o		
55	0K670 990 AA0	BEARING PULLER SET						o	o				
56	0K710 120 004	VALVE SEAL PUSHER		o									

K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
57	0K71E 131 001	COMPRESSOR GAUGE ADAPTER SET		o									
58	0K72A 101 001	ENGINE HANGER		o									
59	0K993 120 001	VALVE SPRING LIFTER ARM		o									
60	0K993 120 004	VALVE SPRING LIFTER PIVOT		o									
61	0K993 120 006	VALVE SEAL REMOVER		o									
62	0K993 270 A08	GAUGE BLOCK							o				
63	0K993 270 A09	DRIVE PINION GAUGE SET							o				

K-3000 (PREGIO BESTA)			ILLUSTRATION	EMA	FLA	CH	MT	MTA	DS	SS	ST	BR	BD
No.	Tool NO.	Tool name											
64	OK993 270 A10	DRIVE PINION MODEL							o				
65	OK993 430 032	ADJUST GAUGE										o	